

Rubber Floor Cleaner and Rejuvenator



Rubber Floor Cleaner is a Rubber Floor Cleaner and Rejuvenator that can be mopped, sponged, or auto scrubbed.

WHERE TO USE

Rubber Floor Cleaner and Rejuvenator is specially formulated for use on Rubber Floors.

APPLICATION

Initial Cleaning:

Sweep the floor first using a dust mop or hard surface vacuum. Apply diluted solution of the Rubber Floor Cleaner and Rejuvenator to new floor with mop or pump sprayer, allow to dwell for 5-15 minutes (Do Not allow solution to dry), scrub area as recommend by manufacturer, remove slurry with extraction machine or wet vacuum Rinse floor thoroughly with fresh water.

ROUTINE MAINTENANCE:

Use Rubber Floor Cleaner and Rejuvenator for routine mopping or auto scrubbing on soiled areas as needed.

RESTORATIVE CLEANING:

Rubber Floor Cleaner and Rejuvenator may be used for very aggressive cleaning. Apply liberal amount of diluted solution to soiled area. Allow to dwell, then agitate solution with rotary floor machine or automatic scrubber. Remove slurry with extraction machine or wet vacuum. Rinse the floor thoroughly with fresh water.

MIXING DIRECTIONS

INITIAL/ROUTINE MAINTENANCE:

Use 2 to 4 ounces per gallon of cold water.

RESTORATIVE CLEANING:

Use 4 to 6 ounces per gallon of cold water.

Technical Specifications

COLOR:	Clear	STORAGE (Unopened):	. 1 Year @ R.T.
FORM:	Liquid	BIODEGRADABLE:	Yes
SCENT:	Mild	WEIGHT/GAL:	. 8
pH:	. 7.0	SHIPPING CLASS:	. None
FLASH POINT:	None	PACKAGING:	4x1 Gal. Case, 5 Gal. Pail
FOAM:	None	TYPE:	. Cleaner
VISCOSITY:	Water Thin	DILUTION:	2 - 6 oz

For Commercial and Industrial Use Only